

P-62 Popcorn Warmer

Part No. 40106
Revised June 1996

Instruction Manual Model #2179



 **GOLD MEDAL**®
FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS



DANGER

Machine **MUST** be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do **NOT** immerse the kettle, warmer, or any other part of this equipment in water. Always unplug the equipment before cleaning or servicing. Do not use excessive water when cleaning.



WARNING

To avoid serious burns, do **NOT** touch the kettle while it is hot.



WARNING

ALWAYS wear safety glasses when servicing this equipment.



WARNING

Any alterations to this equipment will void the warranty and may cause a dangerous situation. **NEVER** make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.



CAUTION

Do **NOT** allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.



CAUTION

This machine is **NOT** to be operated by minors. Minors are classified as anyone under the age of 18.

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

INSTALLATION INSTRUCTIONS

Your new warmer is shipped completely assembled, ready to operate. After removing the corrugated carton from the machine, check it thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company.

Remove all the cardboard packing and tape from the machine. Wipe all exposed surfaces with a damp cloth to remove fingerprints, smears, etc. which may have occurred during unpacking and handling.

ELECTRICAL REQUIREMENTS

Standard voltage for the Warmer is 120 Volts, 125 Watt, 60 Cycle, single phase, AC current.

OPERATING INSTRUCTIONS

LOADING

To load the Warmer, open the plexiglass doors and dump in the pre-popped popcorn. Fill to just below the level of the hinged drop panel. Replenish the popcorn as you sell so that the machine always appears nearly full. A warmer that is almost empty does not do a good job of selling popcorn.

LOCATION

Always pick a good location for your Warmer, so that the public can see the attractive display of popcorn. A front counter is usually the best. Putting it in a back location will diminish sales greatly.

PRE-POPPED POPCORN

Your sales will be only as good as the popcorn you sell. Make sure that you get pre-pop from a top quality supplier. The best pre-popped costs a little more, but your overall profit will be greater because of more sales. The best pre-popped popcorn is that popped in plenty of coconut oil, with Flavacol used for added flavor and taste. If you get popcorn that has been popped in peanut oil, cottonseed oil, or soya oil, the popcorn will turn rancid and will give your machine a rancid smell. This smell is very difficult to clean out of your machine.

CARE AND CLEANING

The aluminum frame of the Warmer is easy to clean. Usually a damp cloth will remove all dirt and grease spots. NEVER use abrasives on the aluminum framework. The plexiglass should always be kept clean and sparkling. Remember, the inside of the plexiglass should be cleaned also. Empty out all popcorn periodically, and clean the inside of the machine. A damp cloth will usually pick up all of the small bits of broken popcorn and the salt that falls off. Empty the old maid drawer and wipe it clean. To keep the warmer unit operating at maximum efficiency, lift up the bottom corn pan and remove all the old corn from the warmer assembly and compartment.

MAINTENANCE INSTRUCTIONS

	⚠ CAUTION
	THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.

	⚠ WARNING
	Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.

	⚠ DANGER
	Do NOT immerse the equipment in water. Unplug your machine before servicing.

ORDERING SPARE PARTS

1. Identify the desired part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity desired.
3. Please include your model name and machine serial number (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

or, place orders at:

(513) 769-7676
Fax: (513) 769-8500
E-mail: goldme19@eos.net

PARTS LIST – P-62 POPCORN WARMER

Part No.	Description
40059	Shipping Carton
40106	Parts Manual
40116	Headliner
41452	Warning, Max. Lamp 75Watt
41671	Reflector Flood
47010	Label, Safe Operating Instructions
47047	Lamp Holder
47145	A Scoop
49057	Bracket, Lamp Shield
49098	Light Shield Angle
49129	Complete Cabinet Assembly
40022	Lead-In Cord
49440	Strip, Heat Element
47120	Knob, Lid Lift
47328	Glide, Delrin Foot (4 Required)
47561	Magnetic Catch
49020	Plexiglass Door
49052	Screw, #8-32 x $\frac{5}{8}$ " Rd. Hd. Ph.
49058	Front, Plexiglas
49059	Side, Plexiglas
49091	Wire Duct, P-60
49093	Top Pan, Woodgrain
49097	Bottom Pan, Woodgrain
49100	Old Maid Pan
49425	Bracket, Strip Heater
49104	Cover, Corner Cover
49105	Corner Cover
49106	Corner Post, Right Rear
49107	Corner Post, Left Rear
49123	Crutch Tip
49124	Screw, #8-32 x $\frac{3}{8}$ " Lg. Brown
49138	Hinge, Left Hand Female
49139	Hinge, Right Hand Female
49140	Hinge, Right Hand Male
49141	Hinge, Left Hand Male
49145	Drop Panel
49146	Bottom Corn Pan
49150	Corner Post, Right Front
49151	Corner Post, Right Rear
49152	Screw, #8-32 x $\frac{1}{4}$ " Hex
75267	Tee Bolt
76026	Strain Relief, #SR-6P3-4
76097	Label, Unplug To Clean
76135	Tag, Power Cord
77506	Decal Front Glass
74119	Label, Warning Disconnect

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-428-2676 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY
10700 Medallion Drive
Cincinnati, OH 45241-4807 USA