
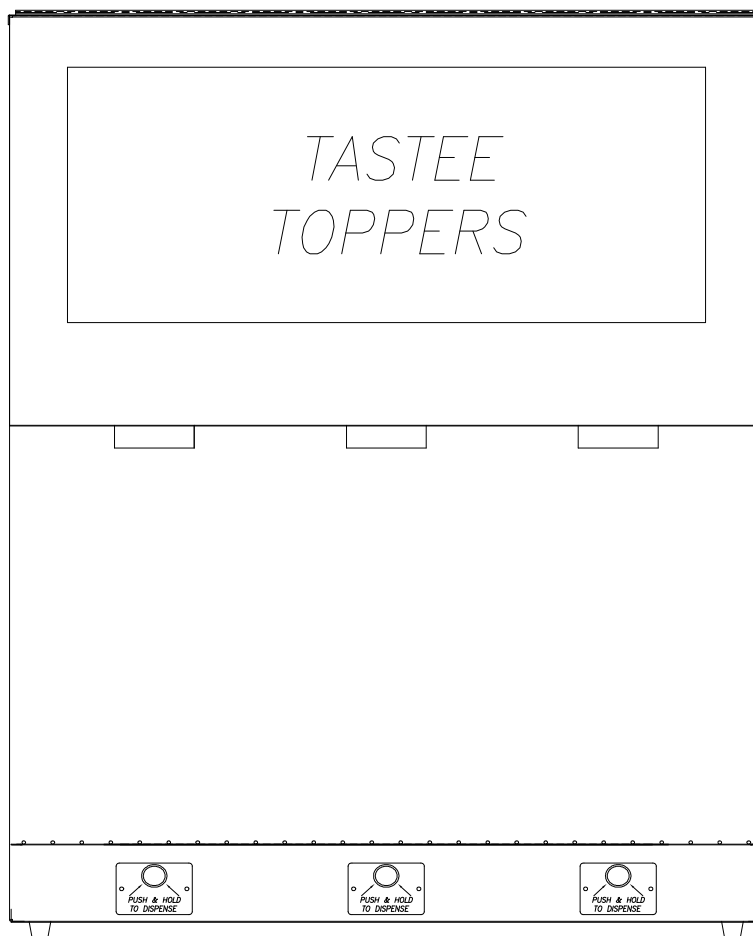


Tastee Topper Flavor Station

Instruction Manual
Model # 2331

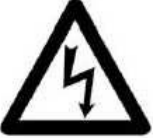

SAFETY PRECAUTIONS

	 DANGER Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water. Always unplug the equipment before cleaning or servicing.
	 WARNING ALWAYS wear safety glasses when servicing this equipment.
	 WARNING Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.
	 CAUTION Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.
	 CAUTION This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.


INSTALLATION

CHECKING SHIPMENT

Your new Tastee Topper Flavor Station is ready for installation on your counter. Remove the machine from the crate. Check thoroughly for any damage, which may have occurred in transit. Damage claims should be filed immediately with the transportation company.

ELECTRICAL REQUIREMENTS

Model No. 2331 - 120 Volts, .71 Amps, 85 Watts, 60 Hertz

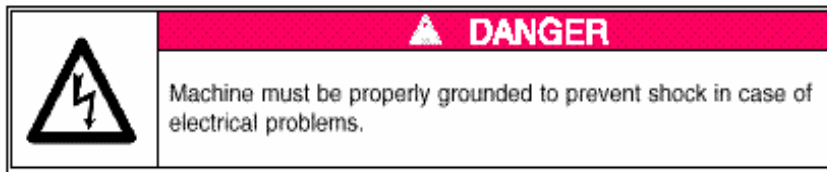

INSTALLATION INSTRUCTIONS

1. Place the unit in desired location on counter.
2. With door open, lift lid, remove bottle stoppers and install TASTEE TOPPERS into flavor bottles.
3. Replace bottle stopper. And close door.
4. Plug the power cord into a proper outlet.
5. The unit is now ready for use.
6. For the replacement of light bulbs, first turn unit off.
7. Open door and remove panel with (4) thumb screws. Then remove retaining strip with (3) wing nuts.
8. Remove inner sign cover and remove and replace bulbs.
9. Re-install inner sign cover, retaining strip and wing nuts. Replace access panel and thumbscrews.

OPERATION INSTRUCTIONS

1. Place item to be flavored under desired flavor
2. Push the corresponding button on front bottom of machine to dispense the desired amount of flavor.
3. The speed of the individual sifters can be regulated by a potentiometer on the inside the machine
4. To change the speed, first, open door to flavor bottles.
5. Between the two bottles on the left are (3) potentiometers.
6. The one on the left varies the speed of the left station, the center one varies the center station, and the right one varies the right station. Turn clockwise to increase speed, counter-clockwise to decrease speed.
7. When this is complete close door and continue operation.

CLEANING INSTRUCTIONS

Your Model 2331 is of modular construction.

1. Open door, remove flavor sifter from mounting bracket.
Remove bottle front sifter and clean components in soap and water.
2. Remove grate and drip pan front bottom of machine and also clean in soap and water.
3. The remainder of the machine can be cleaned with a damp towel and concession cleaner.
4. Replace all parts. Close all doors. Use machine

MAINTENANCE INSTRUCTIONS



CAUTION

THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.



WARNING

Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.



DANGER

Do NOT immerse the equipment in water.
Unplug your machine before servicing.

ORDERING SPARE PARTS

1. Identify the desired part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity desired.
3. Please include your model name and machine serial number (located on the machine nameplate) with your order.
4. Address all parts orders to:


Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

Or, place orders at:
(513) 769-7676
(800) 543-0862
Fax: (513) 769-8500
E-mail: info@gmpopcorn.com

PARTS LIST – DISPENSER ASSEMBLY

1	16866	Grate	1
2	16870	Lid Assembly	1
3	16871	Back Plate	1
4	16872	Bottom Plate	1
5	16879	Frame Weldment	1
6	16882	Upper Sign Retainer	1
7	16884	Door Weldment	1
8	16885	Back Panel	1
9	16886	Upper Female Hinge	1
10	16887	Lower Female Hinge	1
11	16888	Drip Pan	2
12	16889	Switch Box	2
13	16890	Rear Sign Cover	1
14	16891	Savory Sign Kit	1
15	16910	Access Cover	1
16	16911	Latch and Keeper	1
17	16916	Forcing Cone Insert	1
18	16924	Guide	12
19	16952	Front Sign Cover	1
20	16957	Flavor Bottle	3
21	16958	Cap Plug	3
22	38971	Momentary Switch	3
23	42798	Lighted Rocker Switch	1
24	52101	12 VDC Motor	3
25	55248	3-6vdc Power Supply	1
26	74725	Ballast	3
27	74727	Double Tube Lamp	3
28	87247	Rubber Foot	5
29	69811	Sifter Disc	3
30	69813	Sifter Leaver	3
31	69846	Savory Dispencer Body	3
32	69888	Sifter Weldment	3
33	69849	Guide Channel	3
34	69848	Drive Hub	3

ELECTRICAL SCHEMATIC

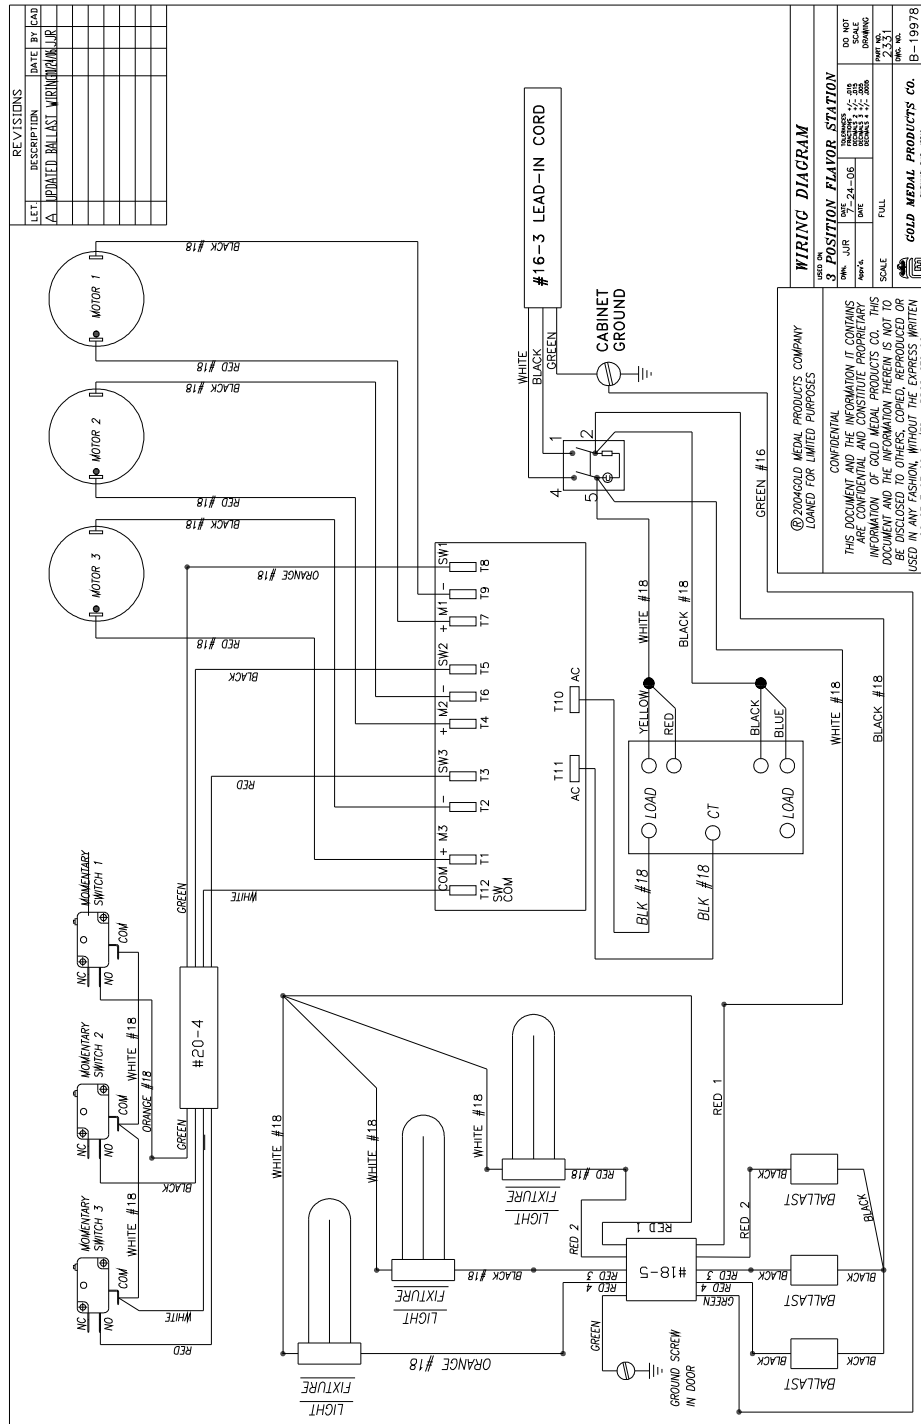

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY
10700 Medallion Drive
Cincinnati, Ohio 45241-4807 USA