

Flav -R- Tator

Part No. 14014
Revised June 1996

Instruction Manual Model #2349




 **GOLD MEDAL[®]**

FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS

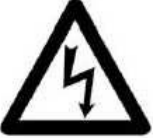	 DANGER Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water. Always unplug the equipment before cleaning or servicing.
	 WARNING ALWAYS wear safety glasses when servicing this equipment.
	 WARNING Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.
	 CAUTION Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.
	 CAUTION This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

INSTALLATION

MACHINE DESCRIPTION

Fill the *Flav-R-Tator* with fresh popped popcorn, sprinkle in 1/3 cup of Savory Mix, clamp on the lid, and turn the motor on for two minutes. The perfectly flavored savory popcorn is ready to eat.

ELECTRICAL REQUIREMENTS

The *Flav-R-Tator* operates on 120 volt, single phase, 60 cycle AC current. Be sure that your electrical supply meets this requirement.

MAINTENANCE INSTRUCTIONS

	⚠ CAUTION
	THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.

	⚠ WARNING
	Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.

	⚠ DANGER
	Do NOT immerse the equipment in water. Unplug your machine before servicing.

DRIVE BELT TENSION ADJUSTMENT

To adjust the tension in the drive belt, loosen the (2) 1/4-20 bolts that hold the motor onto the frame. Tighten the belt tension jack screw until the desired belt tension is achieved. Do not overtighten the drive belt. Be sure to maintain a 1/16" gap between the drive pulley and the motor base. When all adjustments have been completed, re-tighten the (2) 1/4-20 bolts at the motor base.

ORDERING SPARE PARTS


1. Identify the desired part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity desired.
3. Please include your model name and machine serial number (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

or, place orders at:

(513) 769-7676
Fax: (513) 769-8500
E-mail: goldme19@eos.net

FLAV-R-TATOR ASSEMBLY VIEW

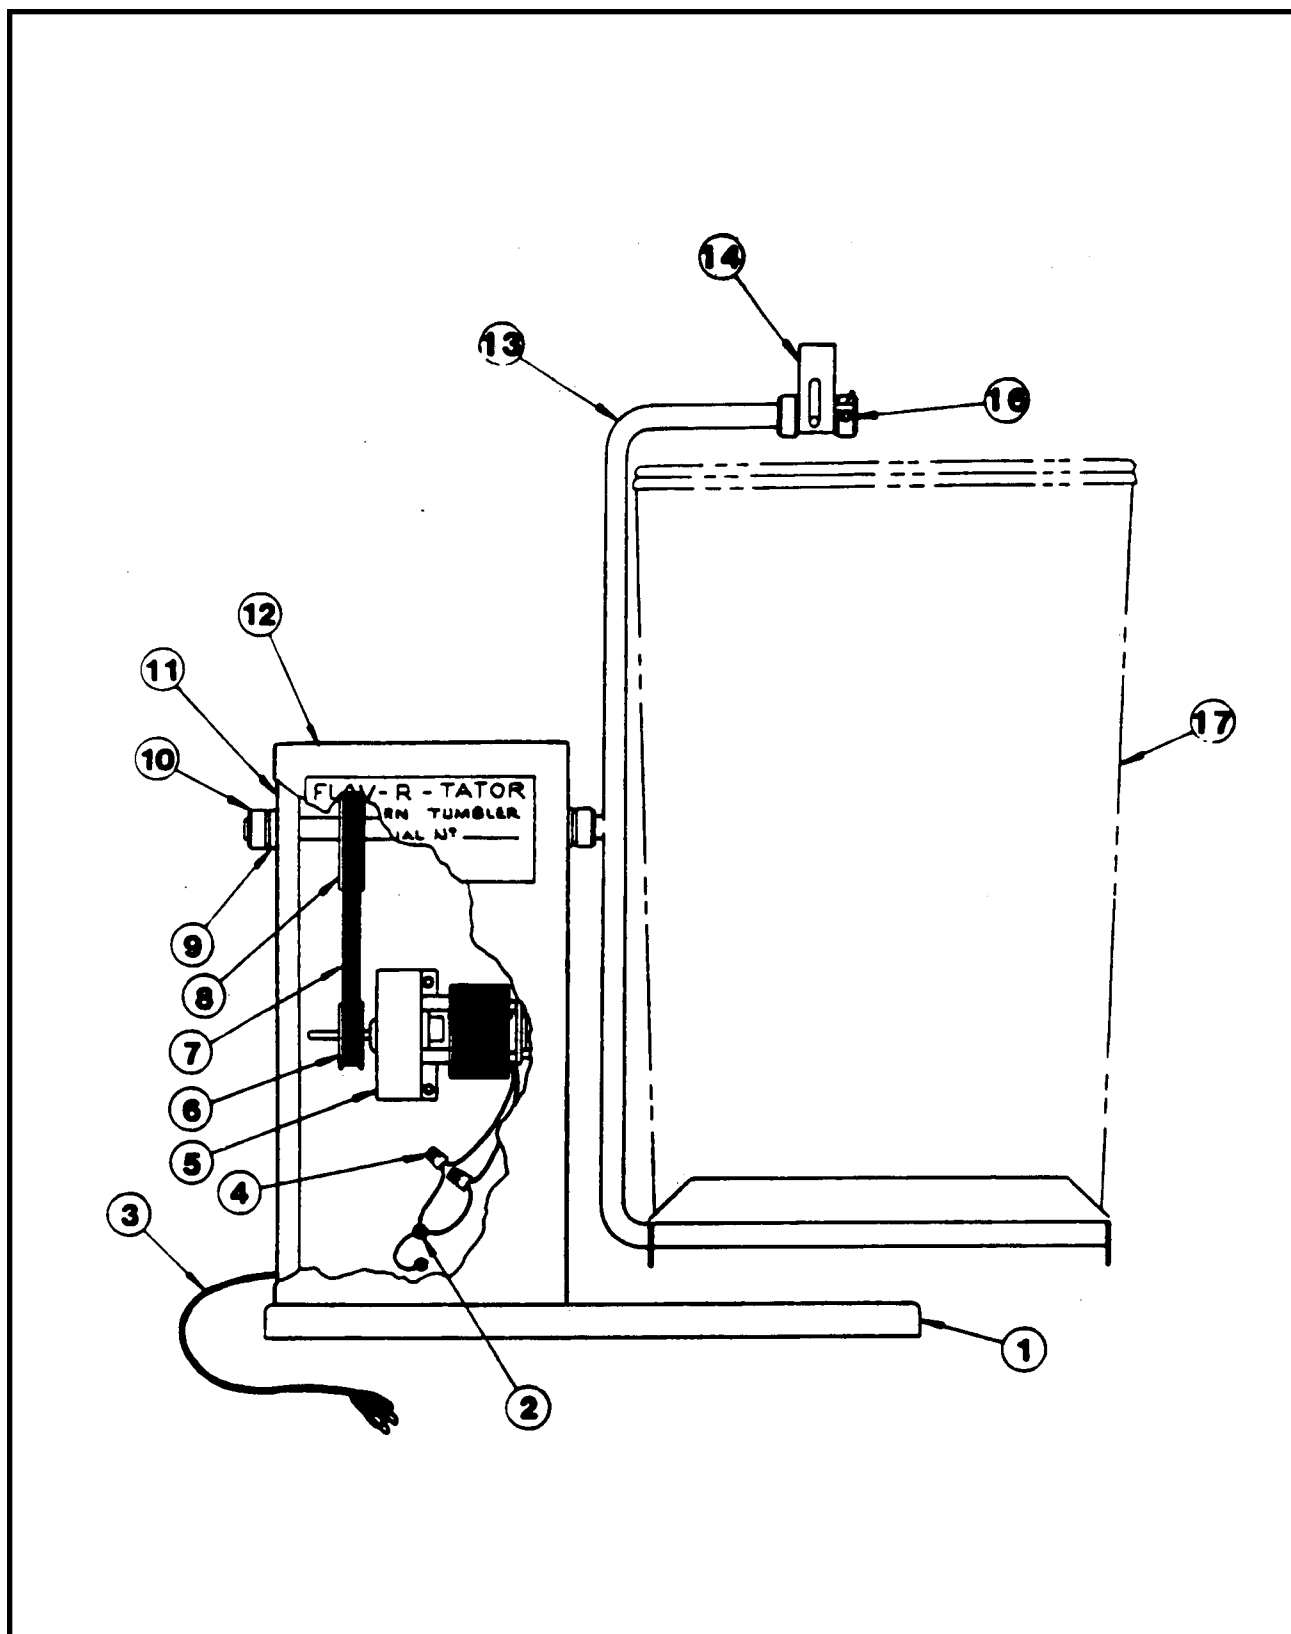

PARTS LIST – FLAV-R-TATOR ASSEMBLY VIEW

Item No.	Part No.	Description
1	14801	Base Plate
2	44073	Strain Relief (#SR-6P-4)
3	22038	Lead-in Cord
4	49133	Dead-end Splice
5	47038	Drive Motor (120V, 60 Cycle)
6	14805	Drive Pulley Assembly
7	14807	V-Belt
8	14806	Driven Pulley
9	41134	Bushing Crossbar
10	74102	Reamed Set Collar
11	14802	Main Wrapper
12	14803	Cover
13	14810	Cradle Assembly
14	14814	Cam Assembly
15	n/a	n/a
16	47751	Set Screw (1/4-20 x ³ / ₁₆ " Long)
17	2165	Shaker Box with Lid

PARTS LIST – FLAV-R-TATOR (PARTS NOT SHOWN)

Part No.	Description
2165	Shaker Box with Lid
14014	Parts Manual
14801	Base Plate
14802	Main Wrapper
14803	Cover
14805	Drive Pulley Assembly
14806	Driven Pulley
14807	V Belt
14810	Cradle Assembly
14814	Cam Assembly
14821	1/4-20 x 1/2" Hex Head Bolt
14826	Motor Mount Bracket
14828	Retaining Clip
14829	Belt Tension Bracket
22038	Lead-In Cord
40324	Rocker Type Switch
41134	Bushing Crossbar
42115	1/4-20 x 1/2" Set Screw
44073	Strain Relief (#SR-6P-4)
47038	Drive Motor (120V, 60 Cycle)
47751	Set Screw (1/4-20 x 3/16")
47771	#8 Screw - 3/8" Long
49133	Dead-End Splice
49322	#10-24 x 1" Hex Machine Screw
74102	Reamed Set Collar
82101	Fender Washer

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-428-2676 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY
10700 Medallion Drive
Cincinnati, OH 45241-4807 USA