

Paragon International, Inc.


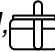 
Butter Warmer Kit

- 1 – Butter warmer
- 1 – Butter squeeze bottle
- 1 – 16oz bottle of buttery topping

IMPORTANT

1. Make sure there is water in the Butter Warmer container at all times.
2. Never switch on the unit without water in the Butter Warmer container.
3. Water must be filled between the maximum and minimum level mark found in the container.
4. Always check the butter temperature before dispensing.
5. Never immerse the Butter Warmer in water.
6. After each use, pour out excess water.
7. Clean unit with damp cloth only.
8. If the supply cord is damaged, the unit will need to be replaced by the manufacturer or its servicing agent.
9. A short power-supply cord is provided to reduce risk resulting from becoming entangled in or tripping over a long cord.

DIRECTIONS

1. Fill squeeze bottle with buttery topping, chocolate/caramel or other syrups.
2. Place the butter squeeze bottle into the butter warmer container.
3. Fill Butter Warmer container with water to recommended water level. Water level must be filled between maximum and minimum level mark found inside the container.
4. When surrounding the space with water, do not overflow the container.
5. Before plugging the butter warmer into a socket, make sure the warmer is switched to the OFF, “O” , position.
6. Set the Butter Warmer Temperature setting to  , for butter and the red LED will illuminate to indicate heating. *DO NOT HEAT butter using the HIGH,  , setting.*
7. When the butter has reached the desired temperature the green LED will illuminate. To remind the user it is ready, a buzzer will also “BEEP”.
8. In between butter dispensing, the butter squeeze bottle can be placed back into the butter warmer to maintain dispensing temperature.
9. Switch the butter warmer to the OFF, “O”, position after use.

Warranty program

60 day manufacturers warranty. Paragon International, Inc. will repair or replace unit when failure is experienced. The obligation of the COMPANY under this warranty is limited to the replacement of parts or assemblies that in the COMPANY's opinion are defective, F.O.B. the factory, or at such other location that the COMPANY may designate.

The foregoing warranty shall not apply to (1) any part or assembly that has been altered, changed, or modified; (2) water damage to components of the kettle assembly due to immersion or improper cleaning techniques; (3) any part or assembly that has been subject to abuse, neglect, misuse, or accidents; (4) damage to the components of the kettle assembly due to improper use of cooking oil; or (5) any machine that has been installed, operated and/or maintained inconsistent with the COMPANY's publications.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER ORAL, WRITTEN, OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR PURPOSE. The liability of the COMPANY arising out of sale, use or operation of the COMPANY's parts or equipment, whether in warranty, contract, negligence or strict liability, including claims for special indirect or consequential damages, shall not in any event exceed the cost of furnishing a replacement for a defective part or assembly as hereinabove provided. Upon the expiration of the warranty period, as hereinabove provided, any such liability shall terminate. The foregoing warranty shall constitute the sole and exclusive liability of the COMPANY.

Within the terms of this warranty the term “Original Purchaser” is limited to the individual, company, or organization stated as the purchaser in warranty records of the COMPANY or an authorized reseller.