

Mega Floss Model #3016 and **Mega Breeze Model #3042** Instruction Manual



Model #3042

Model #3016

 **GOLD MEDAL**
FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 45241-4807 USA

Safety Precautions

	⚠ DANGER Machine MUST be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water. Do NOT use excessive water for cleaning. Unplug your machine before cleaning or servicing.
	⚠ DANGER Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury, or death. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing or servicing this equipment.
	⚠ WARNING Floss head rotates at 3450 RPM. Operator MUST keep hands and face clear of the floss head to avoid possible injury. Keep all spectators at a reasonable distance, and use a Floss Bubble for added customer protection.
	⚠ WARNING Keep all foreign objects out of floss head. To avoid possible eye injury, do not fill floss head with sugar while the head is on and rotating.
	⚠ CAUTION Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.
	⚠ CAUTION This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.

NOTE


The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

INTRODUCTION

Your Floss Machine warranty is described on the back page of this manual. This does NOT cover the ribbons, bands or motor bearings since, they can be damaged by the operator.

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty also does not cover damage that occurs in transit or damage caused by abuse or consequential damage due to the operation of this machine, since it is beyond our control.

ELECTRICAL REQUIREMENTS

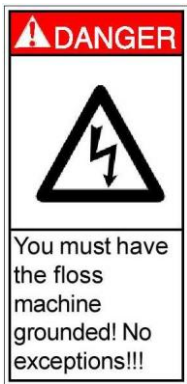

The GOLD MEDAL Mega Floss and Mega Breeze machines require a 15 amp, 120 volt, 60 cycle electrical service.

The power supply cord is equipped with a machine ground (the tubular prong on the male plug). For safety, always plug the machine into a grounded receptacle, which has been tested for proper polarity to insure electrical safety.

BEFORE PLUGGING IN THE MACHINE

Remove all padding and restraints.

Lower the shipping bracket so the bell housing "floats" freely on the springs. Unscrew and push down the two knobs on each side of the cabinet top to lower the shipping bracket completely.

Make sure the floss ribbon (heating element) located inside the head assembly has not shaken out of the band during transportation. On the Model #3016, if the ribbon is out of the band, push it back into place manually, before plugging in the machine.

CONTROLS AND FUNCTIONS

MAIN SWITCH - Turns motor "on" or "off" and supplies voltage to the heat switch.

HEAT SWITCH - Turns voltage to the heating element (ribbon) "on" or "off."

HEAT CONTROL - Increases or decreases voltage to the heating element using a graduated dial.

OPERATING INSTRUCTIONS

The easiest way to make sure you have the right texture sugar with proper flavor and colors is to use GOLD MEDAL FLOSSUGAR. FLOSSUGAR gives good, rich colors and flavors, and does not exceed the color limitations imposed by the Food and Drug Administration. FLOSSUGAR comes in sealed, plastic-coated cartons with handy pouring spouts for filling. If you use your own flavors in cotton candy, make sure they are not gum or starch based; these items burn on the heating elements.




Heat Control Setting Test

1. Follow the guidelines described on page 3 for supplying power to machine.
2. With main switch still OFF, fill floss head. Always fill it 90% full with sugar. This 90% level is necessary to obtain a balanced condition in the floss head. **DO NOT OVERFILL!** Excessive vibration will occur if overfilled. Before turning the power on, manually turn the head to balance out the sugar. This will eliminate excessive vibration of the head.

Important: NEVER add sugar when motor is running.

3. Turn MAIN SWITCH and HEAT SWITCH "ON."
4. Turn heat control knob clockwise to maximum setting to initiate the fastest possible warm up.
5. The machine should start making floss within 30 seconds. When the unit starts making floss, you must reduce the heat setting. Turn the heat control knob counter clockwise to eliminate smoking.

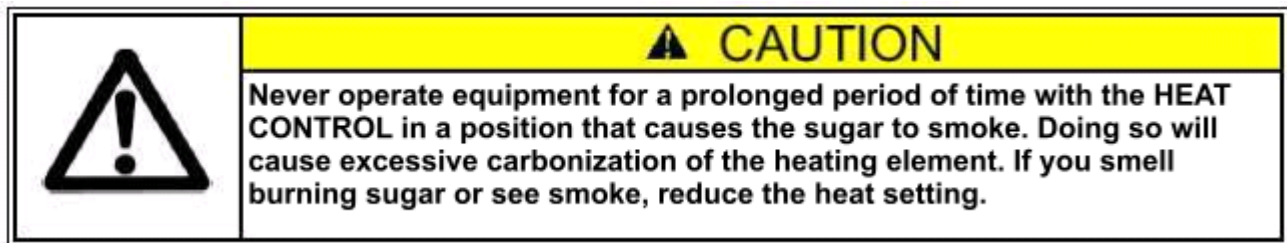

6. Once you find the ideal setting for the HEAT CONTROL, operate with the setting near this position each time.
7. When finished making floss, run the floss head completely empty of sugar.
8. Turn the heat control dial to the maximum position and allow the machine to run for approximately 3-4 minutes. This will burn any excess sugar out of the head and prevent any excess carbon build-up.
9. Turn the heat switch off and allow the motor to run for 1-2 minutes to allow the floss head to cool down.
10. Turn the motor switch off and allow the motor to come to a **complete** stop.

MAKING FLOSS





To avoid floss build-up and bunching which will disrupt the web of floss, and to provide a uniform and easily handled web of floss around the interior of the bowl, ensure that the Whirlgrip screen is properly mounted to permit airflow between screen and wall of bowl.

Pick a cone; if it sticks in the stack of cones, twist it off the stack.

Hold an inch or two of the pointed end of the cone between two fingers and a thumb. With a light flicking action, roll cone in the web of floss building up in the pan. Lift the cone up with the ring of floss attached and rotate the cone to wrap the floss. **DO NOT** roll floss while the cone is inside the pan. This will pack the floss too tightly.

If the floss fails to stick to the cone, pass the cone near the spinner head to pick up a "starter" of melted sugar. Lift the cone out of the pan and wrap the floss with a "figure eight" movement of the hand. This leaves giant pockets and makes the final product appear larger. Make sure room humidity is not too high, or product will be "heavy".

1. Grip cone as shown.
2. Break into web of floss with the cone.
3. Wind the sugar onto the cone.
4. Lift web of floss from the pan and roll onto the cone.


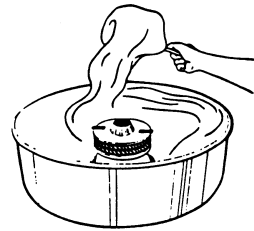
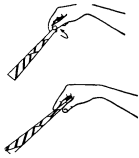


5.

6.

7.

8.

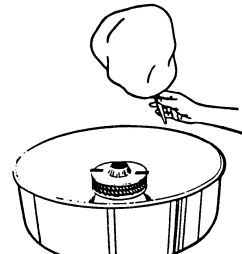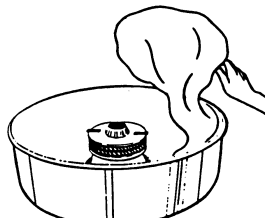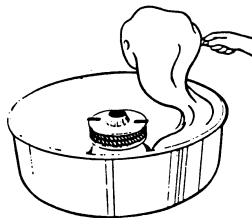


- DO NOT PUT HANDS OR OBJECTS IN ROTATING SPINNER HEAD.
- DO NOT FILL SPINNER HEAD WITH SUGAR WHILE IT IS ROTATING.
- OPERATOR SHOULD WEAR EYE PROTECTION.
- DO NOT PUT HANDS NEAR ROTATING SPINNER HEAD.
- USE FLOSS CONE TO COLLECT COTTON CANDY.

FLOATER ADJUSTMENT

In operation, the floss will collect on the Whirlgrip FLOSS STABILIZER (recommended accessory #3010, shown mounted in bowl in cover image of Model #3016). If the floss collects “low” on the stabilizer, twist the front (leading) edge of the leather floaters down. You get more lift and the floss will collect higher.


Form leather floaters as shown. This creates a lifting action to float the floss higher on the outside wall of the floss pan.

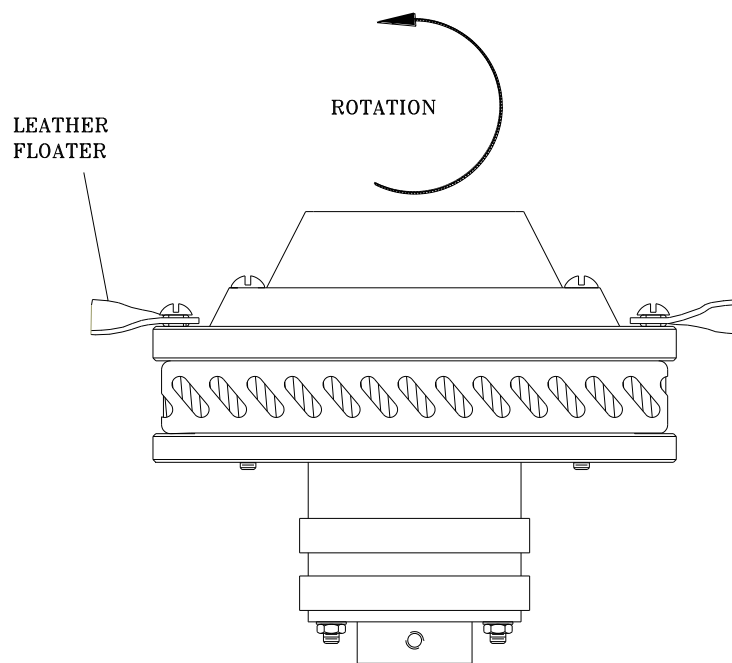

SHUT DOWN PROCEDURE

When completing operation for the day (or any prolonged period), run all the sugar out of the floss head. When empty, turn the heat to highest position for approximately one minute to “clean” the band by baking off remaining sugar. NEVER put water in the floss head. Turn heat off and allow motor to run for 1-2 minutes to allow the floss head to cool down.

MAINTENANCE INSTRUCTIONS

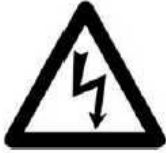

DANGER

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury, or death. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing or servicing this equipment.



WARNING

Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.



CAUTION

THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.

FLOSS BANDS AND RIBBONS (Model #3016 Only)

The GOLD MEDAL Floss machine is equipped with a patent pending FLOSS BAND designed to give long life, trouble-free service with little care. DO NOT scratch the band. To clean, unplug the machine and wipe with a damp cloth.

GOLD MEDAL Floss Ribbons (heat elements) are made of nickel wire with insulation at the terminal point and on the lead wires. They are designed to be as reliable as the GOLD MEDAL Floss Bands: however, the ribbons must be handled carefully. DO NOT stretch the ribbon or it will not function properly.

Disassembly and Removal

1. Remove all sugar from the head of the machine before disassembling. If the unit is inoperative, carefully turn the machine on its side and shake the sugar out.
2. Remove the four spinner cap retainer screws and spinner cap. In some cases, the sugar has caused the cap and band to stick together. Applying gentle pressure with the heel of the hand should free the parts for removal.
3. Remove the element lead wire retaining screws with a ¼" (9.5mm) nut driver and remove the element lead wires from the terminals in the floss head. This will allow the band and ribbons to be removed.
4. (NOTE: Ribbon must be removed from machine for cleaning.) Remove the band and ribbons. If there is excessive sugar buildup, soak the band and ribbons in hot water until the sugar dissolves. When the sugar has been removed, tap the band in the palm of your hand to loosen the ribbons for removal.
5. Inspect, then clean or replace band and ribbons. The primary reason for ribbon replacement is carbon build up inside the ribbon wire from which the heating element is manufactured. If the ribbon is being cleaned only, an additional hot water soak may help remove some of the carbon buildup.

TROUBLESHOOTING

LOW PRODUCTION

1. Check for excessive carbon on the ribbons. Follow the instructions for removing and cleaning band and ribbon if needed.
2. Check heat control for correct setting.
3. Check the line voltage. A primary reason for low production and poor equipment performance is low line voltage. Have an electrician check the line voltage and add new lines for all of the various equipment you have plugged into the electric circuit if there is not enough current for the requirement listed on the equipment nameplate.
4. Check the ribbons. For machines with two ribbons, one burned out or shorted ribbon will cut production in half.
5. Foreign objects in the head assembly may short out a ribbon or cause an out-of-balance condition.

EXCESSIVE SMOKE

1. Check heat control setting. After warm up, equipment should make good floss at a reduced setting. Never let the machine operate with the heat so high it produces smoke or if you can smell burned sugar. This condition quickly fills the ribbon with carbonized sugar.
2. Check the product mixture being used. For best results, use nothing with a cornstarch base.
3. Check the band and ribbon for excessive sugar build up and remove if needed as described on page 9 of this manual.

EXCESSIVE VIBRATION

If the equipment is new, verify that shipping bolts have been loosened and packing materials were removed from the machine.

When adding sugar to the floss head, always fill it 90% full to obtain a balanced condition in the head and eliminate vibration. DO NOT add sugar with motor running!

Check for stretched or uneven suspension springs.

Run the sugar completely out, then check for foreign objects or sugar lumps in the head assembly.

ORDERING SPARE PARTS


1. Identify the needed part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity needed.
3. Please include your model name, serial number, and date of manufacture (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807


or, place orders at:

(800) 543-0862
(513) 769-7676
Fax: (513) 769-8500
E-mail: info@gmpopcorn.com
Web Page: www.gmpopcorn.com

FLOSS MACHINE CABINET ASSEMBLY
(Model #3016 Shown)

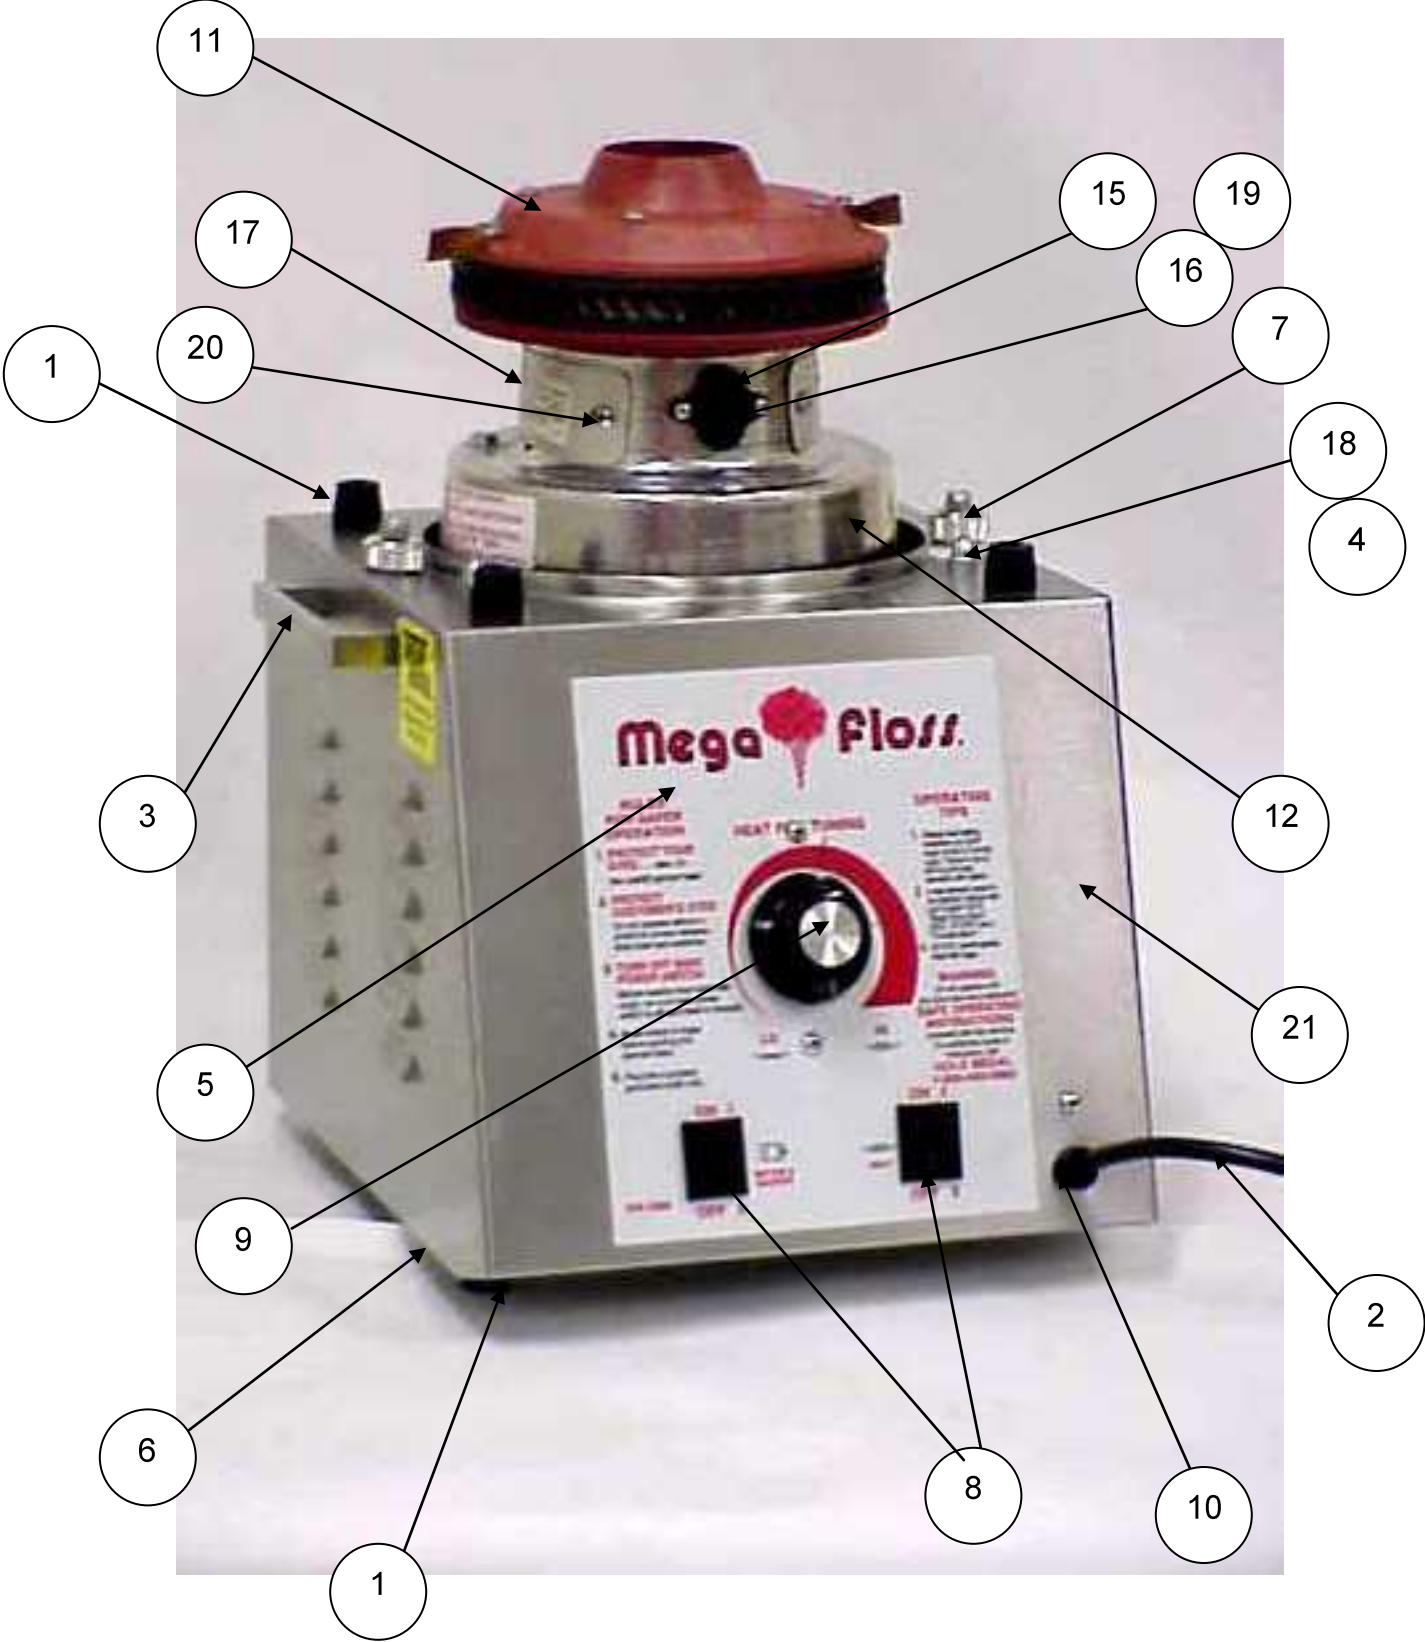

Spinner Head Breakdown for Model #3042

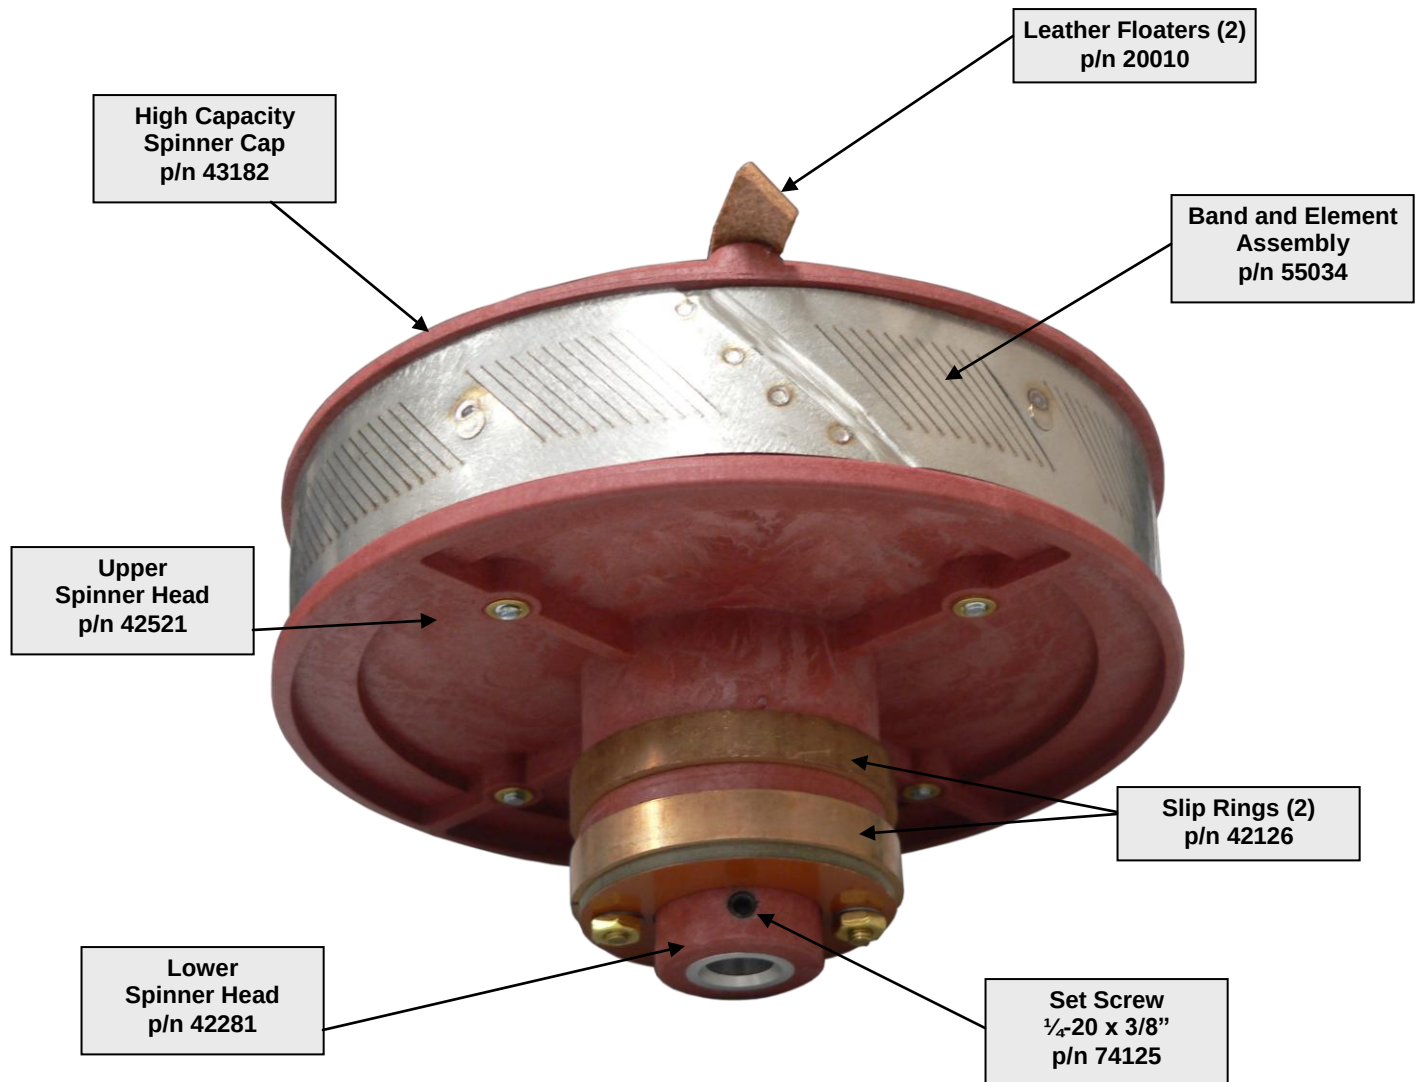

**Note: Complete Spinner Head
Part Number 43192MB**

PARTS LIST

CABINET ASSEMBLY


Item No.	Part No.	Description
1	47155	Molded Recessed Bumper (8)
2	22038	Power Supply Cord
3	67069	Handle (2)
4	42524	Springs (3) For Marathon / A.O. Smith Motor Only
	42294	Springs (3) For Fasco Motor Only
	42120	Springs (3) For Leeson / Baldor Motor Only
5	12604	Nameplate - Model #3016
	55033	Nameplate - Model #3042
6	42448	Bottom Plate
7	42150	Knob, Shipping Saddle (2)
	42570	Shipping Bracket (2)
8	42798	Switch, On/Off (2)
9	42558	Electronic Heat Control
	42556	Knob, Electronic Heat Control
10	76026	Strain Relief
11	43192	Spinner Head Complete
12	42190	Bell Housing
13	42119	Motor Mounting Plate
	42125	Tinnerman Nut 1/4-20 (3)
	75328	Plastic Bushing, 5/16" (7.9mm) I.D. (2)
14	48649	Motor 120 Volt
15	42436	Brush Holder (2)-(For 1/4" Wide Brushes)
	42436W	Brush Holder (2)-(For 3/8" Wide Brushes)
16	42138	Brush Holder Cap (4)
17	42381	Inspection Cover (Screws Part No. 74148)
18	49068	Acorn Nut 1/4-20
19	42140	1/4" Wide Brushes (Measure 1/4" x 1/4")
	55007	3/8" Wide Brushes (Measure 3/8" x 1/4")
20	47229	Tinnerman Nut 8-32 (4)
21	42185	Cabinet Assembly
22	42151	1/4 x 3" Hex HD Bolt *
23	48714	Surge Protector *
24	42040	Floss Pan, Aluminum *
25	42744	Sugar Slinger, Motor Shaft *

PARTS LIST


Model #3016

FLOSS HEAD ASSEMBLY

Item No.	Part No.	Description
	43192	Spinner Head Complete
1	42045	8-32 x 1/4 HX HD Whizlock
2	43182	Spinner Cap, High Capacity
3	43185	Spinner Head Bottom Only
4	42401	7" Floss Single Floss Band
5	43188	7" Ribbon, 120V
6	42162	Terminal Guard, Phenolic
7	20054	Bottom Washer, Phenolic
8	20010	Leather Floater (2)
9	42126	Slip Ring 3/8" Wide (2)
10	48041	Acorn Nut, Nylon
11	42041	Screw, #10-24 x 2"
12	42192	Screw, #8-32 x 5/8 PH PAN
13	42311	Set Screw, 1/4-20 x 2"
14	42127	Slip Ring Stud (2)
15	74143	Hex Nut, #10-32 (4)
16	42215	#10 External Tooth Washer (4)
17	74125	Set Screw, 1/4-20 x 3/8"
18	42305	Terminal Assembly (2)
19	42521	Upper Spinner Head
20	42281	Lower Spinner Head

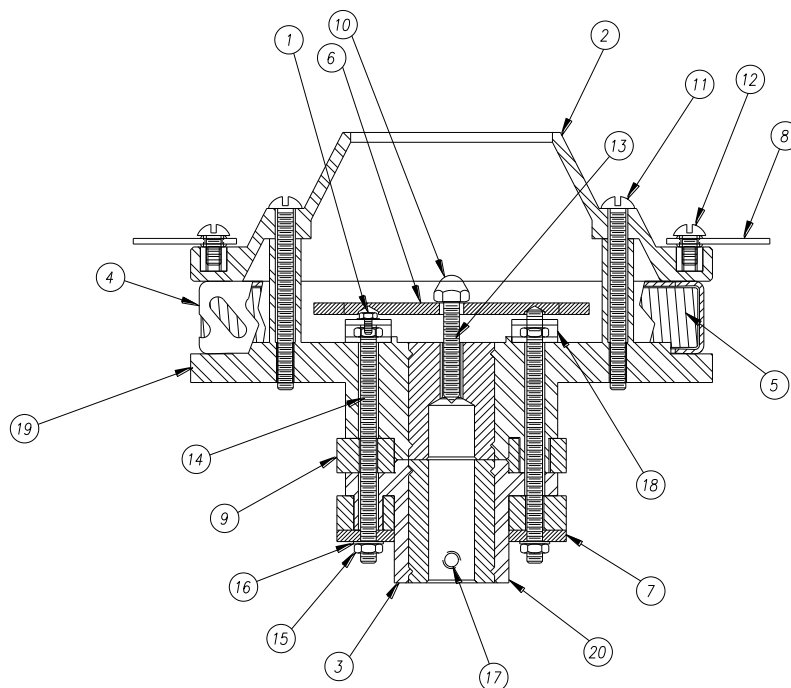


ELECTRICAL SCHEMATIC
A.O. SMITH

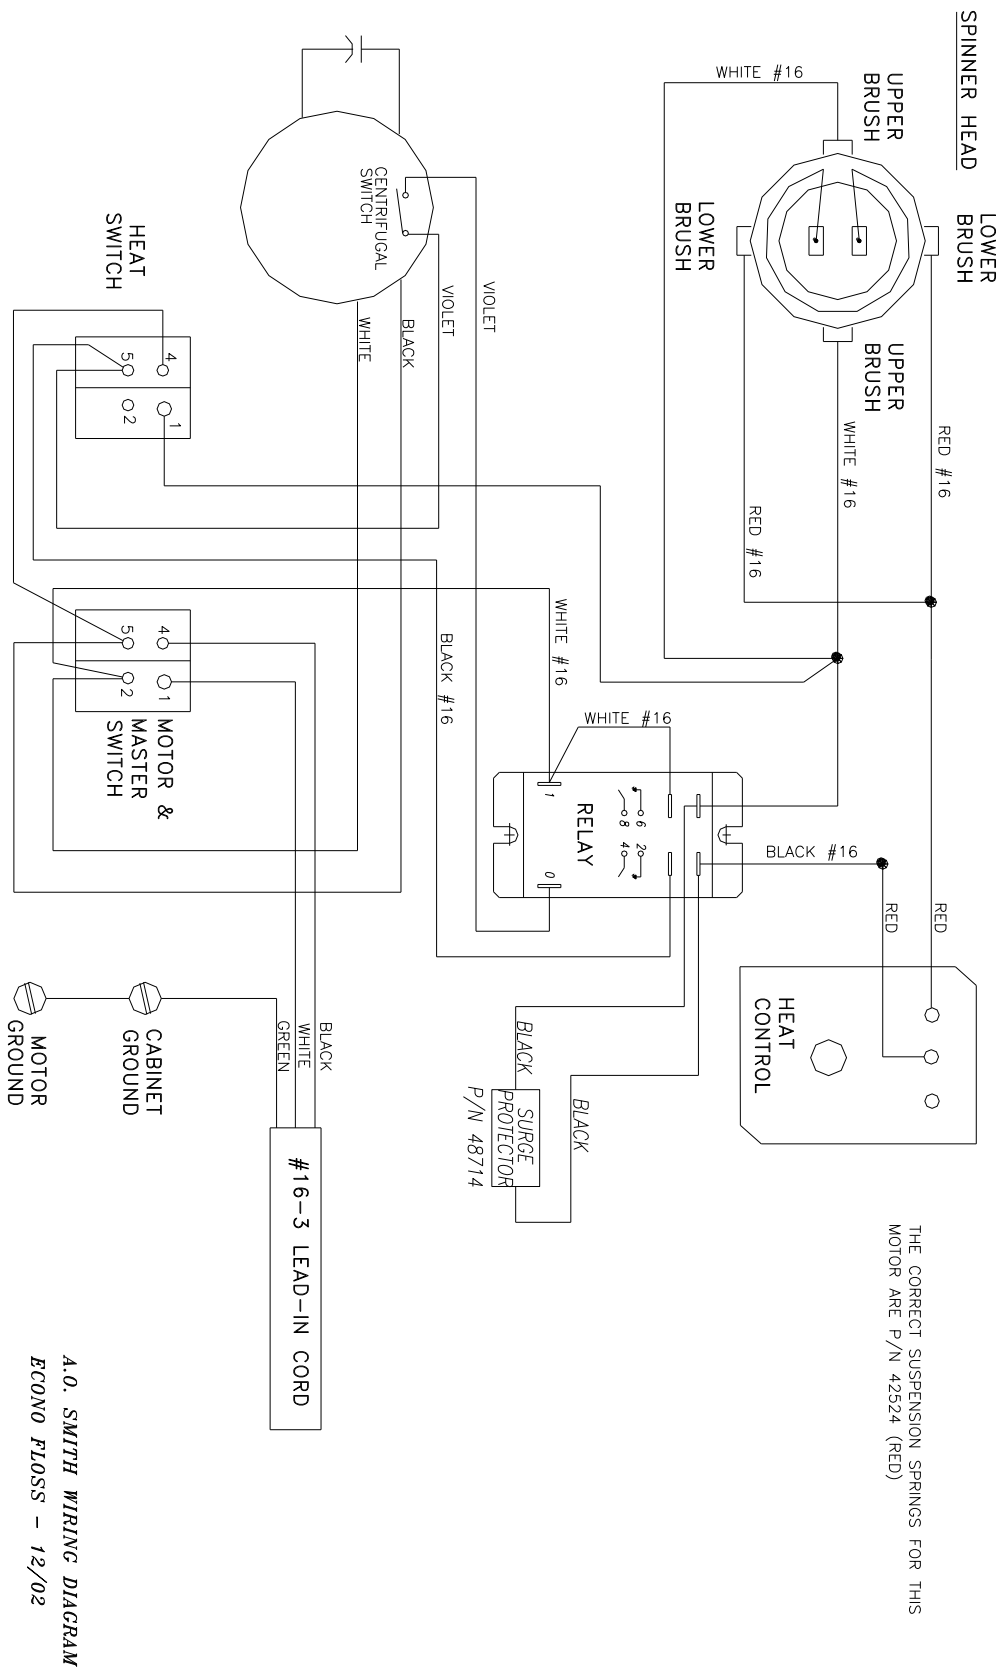


ELECTRICAL SCHEMATIC

FASCO MOTOR

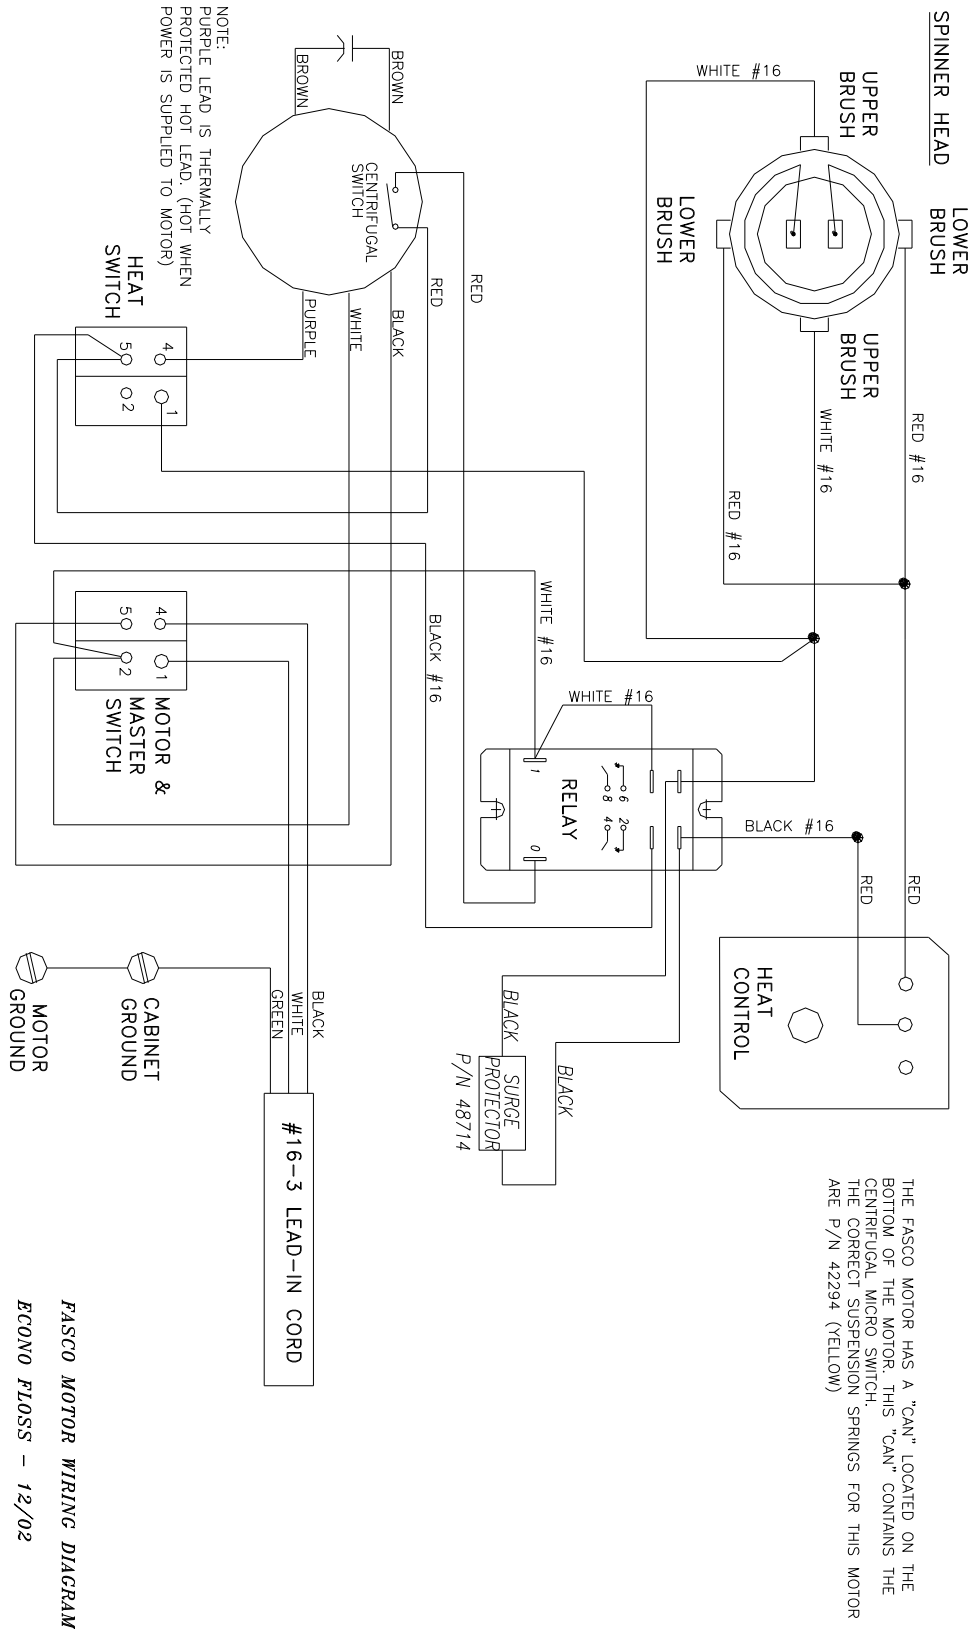

FASCO MOTOR WIRING DIAGRAM
ECONO FLOSS - 12/02

ELECTRICAL SCHEMATIC MARATHON MOTOR

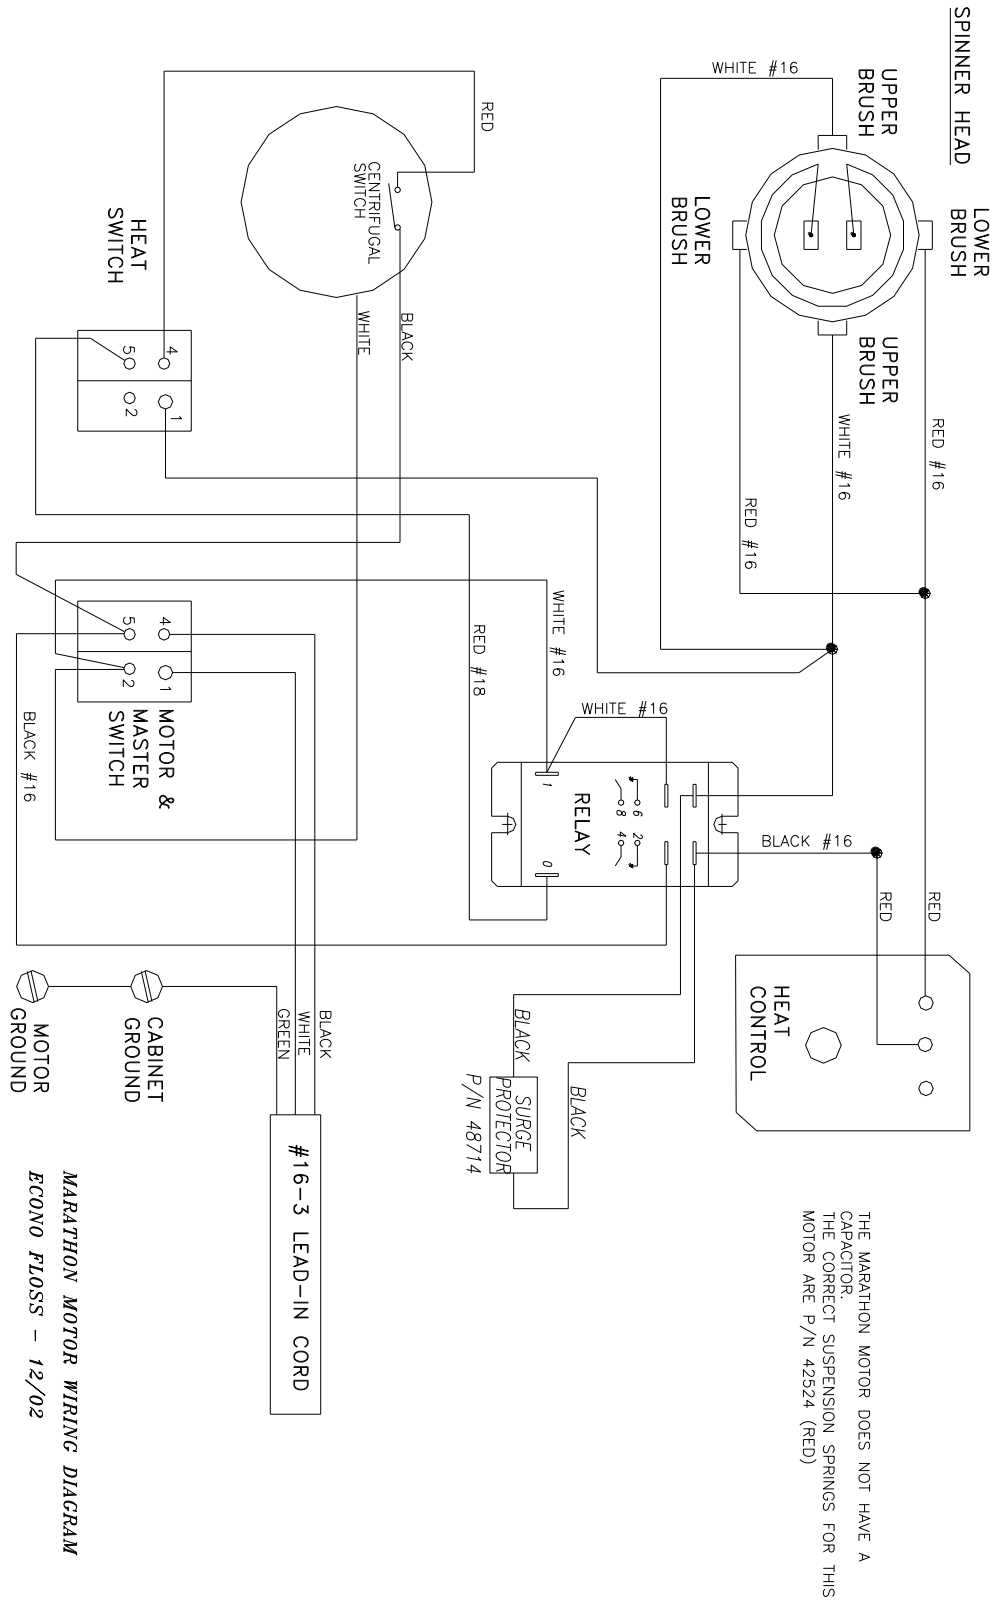

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY

10700 Medallion Drive

Cincinnati, Ohio 45241-4807 USA

www.gmpopcorn.com

Phone: 1-800-543-0862

Fax: 1-800-542-1496

© The text, descriptions, graphics and other material in this publication are the proprietary and exclusive property of Gold Medal Products Company and shall not be used, copied, reproduced, reprinted or published in any fashion, including website display, without its express written consent.